

# **SWING-ARM** TIRE CHANGER



#### **SWING-ARM**

The mounting arm swings to the side so that the machine can be installed in a space-saving way directly near a wall.



#### **ADJUSTABLE CLAMPING JAWS**

Self-centering nylon-covered clamping jaws protect the wheel and provide a secure grip.



### ON-FLOOR BEAD BREAKER (PEDAL-OPERATED)

Traditional side-shovel bead breaker with ergonomic pedal-control positioned away from the shovel; the fastest solution for standard, soft sidewall, and high-aspect tires.



#### **COLUMN-INTEGRATED AIR TANK**

Unobtrusive, vertical design, column-integrated air tank helps conserve valuable shop space with a large volume for increased blasting capabilities.



# **SYSTEM II-E**



# **TECHNICAL SPECIFICATIONS**

to facilitate bead seating.

Max Rim Diameter	24"   61cm
Max Tire Width	13"   33cm
Max Wheel Diameter	39"   99cm
Power Supply	115V 1ph 60Hz 12A
Air Pressure Required	116-174 PSI   8-12 bar
Dimensions HxWxD	71"x45"x55"   180x114x140cm

# STANDARD ACCESSORIES

- · Wave Plus Tire Lever
- Lube Bucket
- Lube Brush
- Protective Insert for Mount/Demount Head
- · Plastic Jaw Protector





